


## StealthTouch: How to Replace a HDD



1. Turn off system.



2. Remove 2 screws  
(see circles.)  
3. Pull cover to open (arrow.)

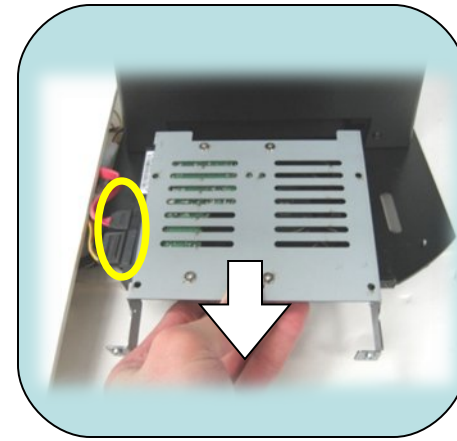

4. Unplug hard drive cables  
(see circle.)  
5. Pull hard drive bracket To  
replace.